

PowerBank 2019

Quick Start Guide

Version 1.0 **EN**

To Users

Dear user, thank you for choosing XAG products.


For safety reasons and to ensure the best experience possible, XAG recommends that you read through the Quick Start Guide and Disclaimer in this document before attempting to use the Power-Bank 2019.

Contact Us


If you have any questions about this document, please contact our Technical Support via email: info@xa.com

List of Items

When opening the product for the first time, please check that the following items are not missing. Please contact your dealer if there are any missing items.

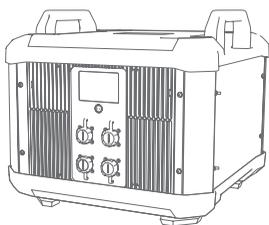


PowerBank
X 1

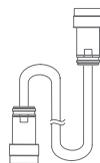

Charging Cable
X 2

PowerBank

Operational Buttons:

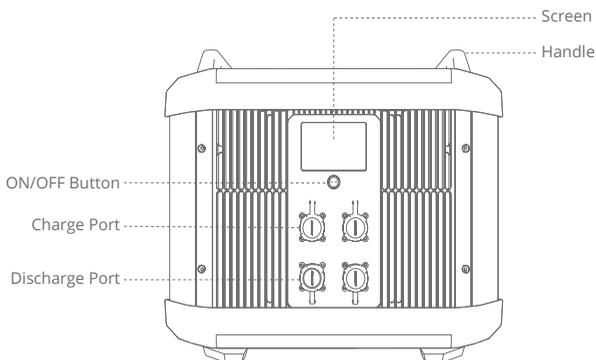


ON/OFF

Press and hold the power button twice to turn the PowerBank on and off. First, press and hold the power button (>1 second) until the screen flashes with a prompt "Please press and hold again to turn on" or "Please press and hold again to turn off". Pressing and holding the power button (>1 second) a second time will cause the device to beep and turn on/off again.


Charge

Please charge the PowerBank 2019 with the XAG Battery Charge Hub 2019 or Charger 2019 and a Type-C to Type-D cable. To charge, connect the Type-C end to the output port (Type-C) of the charger and the Type-D end to the input port (Type-D) on the PowerBank. When both channels are used for charging, it takes 2-2.5 hours to fully charge the PowerBank.

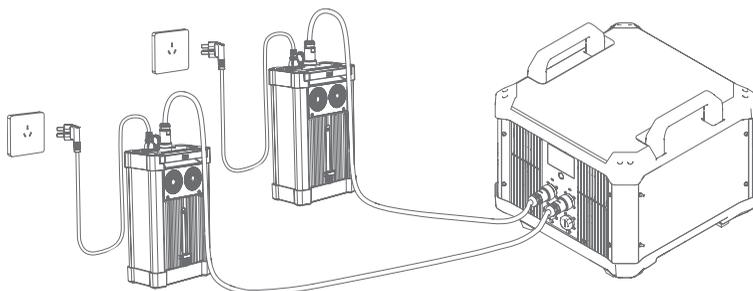


Discharge

Please charge the P-Series Smart Battery with the PowerBank 2019 and XAG Rapid Charger 2019. To charge, connect the charger port to the output port (Type-C) on the PowerBank. It takes 20-30 minutes to charge each Smart Battery.

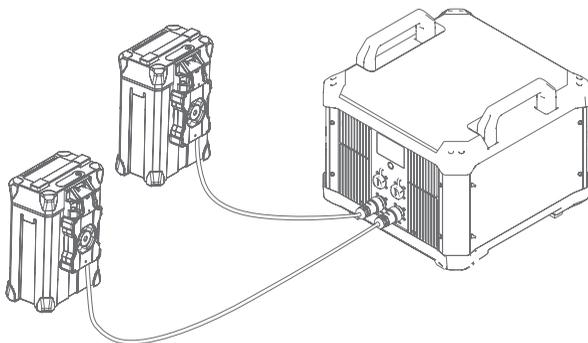


Screen Switch


The PowerBank 2019 features five interfaces, which can be accessed by pressing the power button. The home interface shows power, cell temperature, and the number of cycles; in case of overvoltage, undervoltage, overcurrent, or exception, OV, UV, OC or E are displayed at the upper part respectively. The other four interfaces are used to display the cell voltage/current, temperature, software/hardware version No., and communication operator.

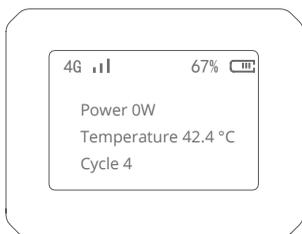


Home Interface

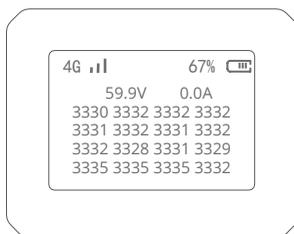


Cell Voltage Interface

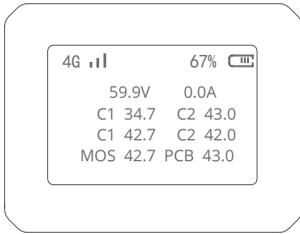

Temperature Interface

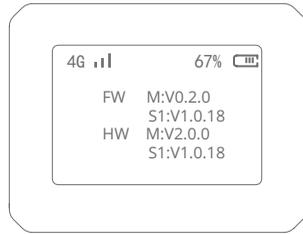

Software/Hardware Version Interface

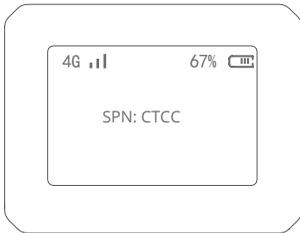

Operator Interface

Notes

- Please keep the power connector clean and avoid contact with metal objects.
- Store the PowerBank under full charge after each use. Do not use or store the PowerBank at a temperature below -10°C or above 45°C . When it is not in use for a long time, please keep it in a cool and dry place and fully charge it every 90 days to prevent power loss.
- Do not leave the PowerBank in direct sunlight or rain.
- Do not use chargers other than the original one that came with the PowerBank. Keep the PowerBank away from flammable and explosive materials when charging, and do not leave it alone while it is being charged.
- When disposing of the PowerBank, please follow local laws and regulations. Protect the natural environment, and do not discard it irresponsibly.
- If an error or warning is issued during the charging process, please turn off the power immediately, and resume use only after the product has been checked for safety.
- After use, remove the connector from the PowerBank, and keep both in a safe, clean and cool place.

Disclaimer

1. For your legitimate rights and interests as users, please read through the manual, disclaimer and safety instructions attached with this product carefully before using this product. XAG reserves the right to update the above documents. Please use this product in strict accordance with the manual and safety instructions.
2. This product is not suitable for people under the age of 18 or those without full capacity for civil conduct. Please keep this product away from the reach of children, and be very careful when operating in the presence of the people aforesaid.
3. The use of this product shall be deemed as evidence that you have known, understood, acknowledged, and accepted all the terms and content contained in the manual, disclaimer and safety instructions of this product. The user agrees to be responsible for his or her behaviors and all consequences arising therefrom. The user agrees to use the product only for the purpose of which it is intended and agrees to these terms and to any relevant policies or rules that may be established by XAG.
4. During the use of this product, you must strictly observe and follow the requirements including but not limited to those specified in the manual and safety instructions. For all the personal injuries, accidents, property losses, legal disputes, and other adverse events that cause conflicts of interest arising from your violation of the safety instructions or a force majeure event, you shall bear the relevant liabilities and losses, and XAG shall not be held liable.
5. XAG will not assume any responsibility for any violation of laws and regulations that is caused, directly or indirectly, by users' use of this product.
6. As laws in some countries may prohibit exemptions from liability clauses, your rights in different countries may vary. This does not mean that the contents of this Disclaimer are necessarily invalid.
7. To the extent permitted by law, XAG has the final right to interpret and modify the above terms.



info@xa.com



@XAGofficial



@XAG_official



YouTube

@XAG Official

XAG
MAKE AGRICULTURE SMARTER

This Manual is subject to upgrade without prior notice.

©XAG Co., Ltd. All Rights Reserved.

All information of this User Manual (including but not limited to any text description, illustrations, photos, methods and processes, etc.) belongs to XAG Co., Ltd. and is protected by copyright law. Without written authorization, no individual or institution is allowed to reproduce, extract, translate, distribute, or otherwise reproduce or quote any content hereof.